




JUNKERS

Bosch Thermotechnik

Einbauanweisung
Installation Instruction
Montagevoorschrift
W125...T, TZ..T1, TZ1 (Oxystop)


1)

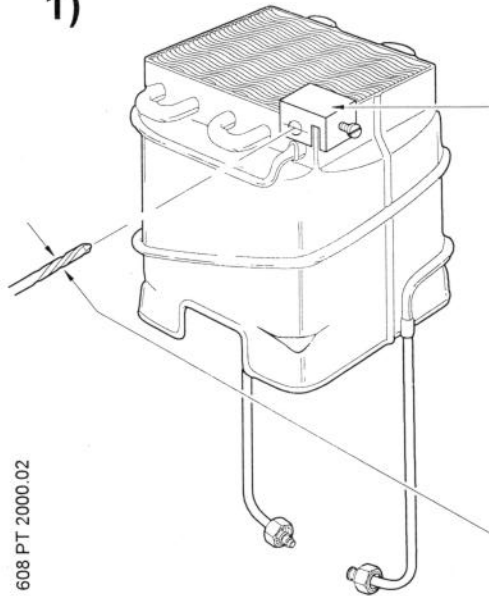

Bohrschablone
Drilling template
Boorschabloon

Bohrer Ø4,5
Twist Drill
Boor

2)

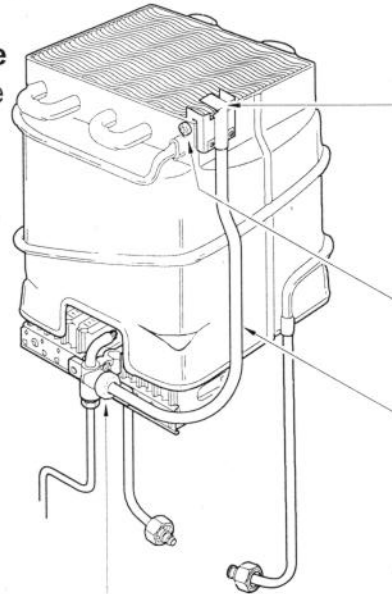

Schnorchel
Snort
Snorkel

Linsenblechschraube
Screw
Schroef

Ansaugrohr
Suction pipe
Aanzuigpijpe

Überwurfmutter
Union nut
Wartelmoer